

G I N

Yeti Front Container

Pilot Manual

v1.0, 05/2014

Options

Rescue Soft Shackle

- Dyneema line
- lightweight
- Weight: 7g

Yeti Y bridle


- shoulder attachment
- for Yeti & Yeti Convertible
- Weight: 42g

Yeti Xtrem bridle

- main caribiner attachment
- Velcro backing
- Weight: 76g

Lite Yeti rescue Y bridle

- Dyneema shoulder attachment
- 2 sizes: 80cm, 125cm
- Weight: 40g

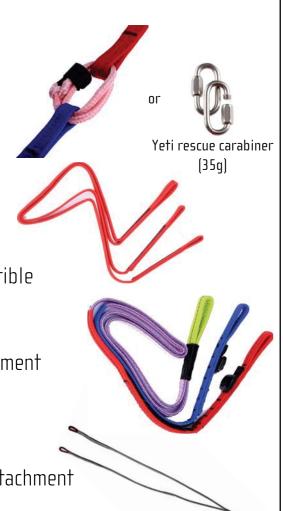

Included





Bridle to rescue attachment




Bridle attachment

Pass the Y bridle through the rescue attachment

Pass the ends of the Y bridle through the base

Pull to make a clean knot

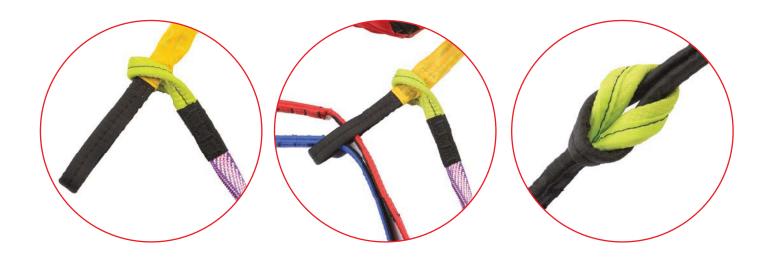

Rescue handle attachment



Handle attachment

Pass the handle through the center loop

Pass the handle through itself

Pull to make a clean knot

1. Packing- shoulder attachment bridle



Attach the red strap using the velcro

Insert the black webbing into buckle on red strap

Place the rescue & arrange the bridle



Fold the rescue over the bridle (center)

Pass string through the eyelets

Pass the string through the base flap

Pass the string through the top flap & pull tight



Pass the plastic wire through the cloth eyelets

Remove string & pass the plastic wire into pockets

Put the edges of the handle into the covers

Tighten the elastic bands & tuck behind the rescue

2. Packing- main carabiner attachment bridle



Make a knot with rescue bridle

Velcro on bridle.

Insert the black webbing into the buckle on the blue and red bridle.



Arrange the bridle like the grey arrow.

Put the rescue on the bridle.

Join the rescue handle to rescue.







Use string to fasten the flaps

Insert the yello wire into the pockets

Put the edges of the handle into the cover



Pull the draw strings tight to secure the rescue



Tuck the draw strings behind the container



Attach the Y bridle to the main carabiners

Bridle to harness



Attach the red strap or front bridle to the main carabiner



Pass the chest strap through For the Yeti and Yeti the adjustable loops in the rear



Convertible, attach the Y bridle tunnel to the main



Shoulder attachment



Pass the Y bridle up though the bridle tunnel




Attach the bridle to the Soft Shackle & shoulder attachment points



Cover the Soft Schackle with the neoprene cover

Soft Shackle

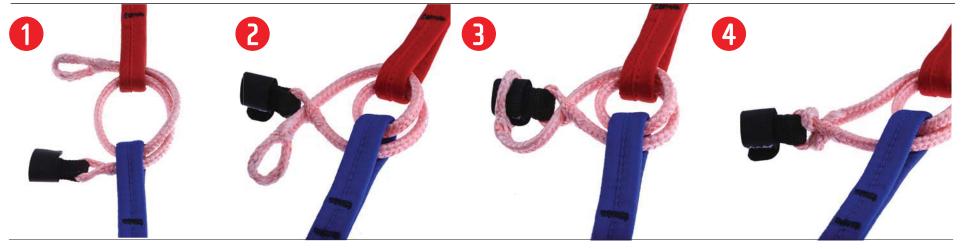

Pass the Soft Shackle line through the connections 2 times

Pass the loop end of the line through the velcro base loop

Pass the velcro base through the loop end

Pull tight on the velcro base to make a clean knot



Wrap the velcro around one side of the line

Cover the Soft Shackle attachment using the Maillon rapide cover